

wlcaulk.com 800-241-5295

## Caulk Removal & Caulk Application

Caulk removal - wear protective goggles and gloves

1. Remove all existing caulk - use a caulk remover (Goo-Gone) to soften the caulk followed by a caulk scraper to remove the caulk.

2. Clean the surfaces thoroughly to remove: loose particles, grease, dirt, oil, wax, loose paint, dust, and soap film.

 
3. Remove any mold/mildew with a 4:1 mix of water to bleach, followed by a detergent that does not contain ammonia. Rinse surfaces and dry thoroughly.

Caulk application - all surfaces must be structurally sound (repair any damaged surface area)

1. Use low-tack painter's tape to mask both sides of the intended caulk area for a clean professional finish.

2. Scan QR code on White Lightning package for product data sheet application details.

3. IF, joints are over 1/2" deep; purchase and install closed-cell foam backer rod (just before caulk application). This prevents three-sided adhesion (leading to caulk failure). Backer rod should be 25% wider than the joint width so it remains in place during caulk application. Top of backer rod should be no more than 1/2" from surface of substrate.



4. Cut caulk cartridge tip at 45° angle. Using a caulk gun - apply caulk in a smooth continuous motion. A 6:1 caulk gun thrust-ratio is ok for small projects, a 12:1 thrust-ratio is better (prevents hand fatigue) for large projects: windows, doors, baseboards, etc.

5. As soon as you apply the caulk, glide your finger (or a caulk tooling blade) over the caulk to smooth/tool it and ensure good contact with the surfaces.

6. *Immediately* and carefully remove any painter's tape after smoothing/tooling the caulk.